

SCT Series

Fan Coil Thermostats

20260623R1

Technical Catalogue



The Havkon SCT.2350 Series is a modern fan coil thermostat family designed for reliable room temperature control in residential, commercial, and hospitality applications. Featuring a high-contrast LCD display and **capacitive touch buttons**, it combines elegant design with intuitive operation.

Designed for **2-pipe and 4-pipe fan coil units**, SCT.2350 thermostats provide **3-speed fan control** and independent **heating and cooling valve outputs**. Automatic and manual operating modes ensure efficient climate control while maintaining optimum comfort conditions.

Advanced features such as configurable control parameters, key lock functionality, and optional Modbus RTU communication make the SCT.2350 Series suitable for a wide range of commercial and residential HVAC applications.

Combining **reliable performance**, **flexible control functionality**, and a modern appearance, the SCT.2350 Series delivers an effective solution for fan coil climate control systems.

Features

- 3-Speed Fan Control (Low / Medium / High)
- On/Off Heating and Cooling Valve Control
- Suitable for 2-Pipe and 4-Pipe Fan Coil Units
- Automatic Heating / Cooling Changeover
- Manual & Automatic Fan Operation
- External NTC Temperature Sensor Input
- Window Contact Input
- 3.2" LCD Display with Capacitive Touch Buttons
- Configurable Service Parameters
- Key Lock Function

Order Codes

SCT.2350.W	Weekly Programmable Fan Coil Thermostat, White Housing
SCT.2350.B	Weekly Programmable Fan Coil Thermostat, Black Housing
SCT.2350.T.M.W	Weekly Programmable Fan Coil Thermostat, Modbus RTU, White Housing
SCT.2350.T.M.B	Weekly Programmable Fan Coil Thermostat, Modbus RTU, Black Housing

Warnings



Before installing and operating the device, carefully read the user manual and the instructions below.

- The user is responsible for any damage, loss, or injury caused by improper use or failure to follow these instructions.
- Do not modify, disassemble, or attempt to repair the device.
- Ensure correct supply voltage before powering the device.
- Disconnect power before installation and wiring.

Failure to comply with these instructions may result in device malfunction and will void the warranty.

SCT Series

Fan Coil Thermostats

20260623R1

Technical Catalogue

Product Overview

The **Havkon SCT.2350 Series** is a fan coil thermostat family designed to provide accurate room temperature control and enhanced indoor comfort in residential, commercial, and hospitality applications. Featuring a **3.2" LCD display** and **capacitive touch buttons**, it combines modern design with intuitive operation. Designed for **2-pipe and 4-pipe fan coil systems**, SCT.2350 thermostats provide **3-speed fan control** together with independent **heating and cooling valve outputs**, ensuring reliable and efficient climate control.

Suitable for **offices, hotels, hospitals, residential buildings, and commercial facilities**, the SCT.2350 Series offers flexible operating modes, configurable control parameters, and dependable temperature regulation for a wide range of fan coil applications. Combining **reliable performance, easy operation, and elegant design**, it delivers an effective solution for modern HVAC comfort control systems.



Key Features & Functions

Application Areas

- Fan Coil Units
- Hotels & Hospitality Facilities
- Office Buildings
- Residential Buildings

Control Architecture

- 3-Speed Fan Relay Outputs
- Heating Valve Control (On/Off)
- Cooling Valve Control (On/Off)
- 2-Pipe & 4-Pipe Fan Coil Support

User Experience

- Capacitive Touch Button Interface
- Automatic / Manual Operation
- Adjustable Temperature Limits
- Configurable Service Parameters

Control Functions

- Automatic Heating/Cooling Changeover
- External NTC Sensor Support
- Window Contact Input
- Key Lock Function

SCT Series

Fan Coil Thermostats

20260623R1

Technical Catalogue

Technical Specifications

Electrical Data	Power Supply	230 VAC $\pm$ 10%
	Frequency	50/60 Hz
	Power Consumption	Max. 3 VA
	Connection	Terminal block, 1.5 mm ²
	Real Time Clock (RTC) Backup Battery	CR1220 Lithium Cell, 3V
	Communication	Modbus RTU (RS-485) (Modbus Models Only)
Environmental Conditions	Operating Temperature	0 ... +40°C
	Storage Temperature	0 ... +70°C (without icing and condensation)
	Relative Humidity	Max. 95% RH (Non-condensing)
	Operating Altitude	Max. 2000 m
User Functions	Display	3.2" LCD Display
	User Interface	Capacitive Touch Buttons
	Operating Modes	Heating / Cooling / Auto / Ventilation
	Fan Control	3-Speed Fan Control (Low / Medium / High)
	Valve Control	2 Relay Outputs (Heating & Cooling Valves)
	Fan Coil Compatibility	2-Pipe & 4-Pipe Systems
	External Sensor Input	NTC 10K
	Window Contact Input	Available
	Key Lock Function	Available
	Service Parameters	Configurable
Protection & Standards	Temperature Limits	Adjustable
	Protection Degree	IP 20
	Standard	EN 60529
	Housing	ABS / PC Plastic Enclosure
	Color Options	White / Black

Enclosure Specifications

Mounting	Wall mounting
Dimensions	W86xH86xD40mm (Width x Height x Depth)
Visible Screen Area	W66xH50mm
Weight	188 g

Connections

The device must be installed and operated in accordance with applicable electrical regulations.

- Ensure that the power supply is disconnected before installation and wiring.
- Use appropriate cable cross-sections according to load and installation conditions.
- Do not route signal cables together with power cables.
- Protect the device from moisture, dust, and vibration.

Recommended: Use an external fuse rated max. 6 A for supply protection.

SCT Series

Fan Coil Thermostats

20260623R1

Technical Catalogue

User Interface & Operation

The main screen provides real-time monitoring of room temperature, operating mode, fan speed level, and system status. Users can easily adjust set temperature values and navigate device functions using the front touch-sensitive buttons.

The display shows:

- Current room temperature
- Set temperature (Setpoint)
- Fan speed level
- Heating / Cooling Mode
- Weekly schedule status
- Date and time

The front buttons provide quick access to operating modes, fan control, parameter settings and temperature adjustment functions.

Button	Function
□ Power	Device On / Off
M Mode / OK	Mode Selection / Confirm
Fan	Fan Speed Selection
▲	Increase Value / Navigate Up
▼	Decrease Value / Navigate Down




Operating Modes

The device supports multiple operating modes for flexible temperature and comfort control. Users can easily switch between operating modes using the **M (MODE/OK)** button, while the active mode is continuously displayed on the main screen.

- **Automatic Mode** – Automatic heating and cooling control according to room conditions
- **Manual Mode** – User-controlled heating, cooling, and fan operation
- **Fan Mode** – Independent fan speed adjustment with automatic or manual selection
- **Weekly Schedule** – Time-based automatic operation according to programmed schedules.

The active operating mode and system status information are continuously displayed on the main screen for convenient daily monitoring.

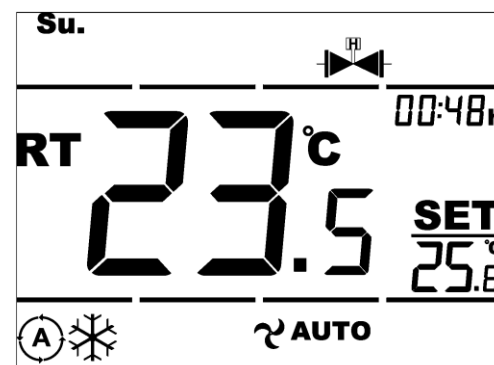

SCT Series

Fan Coil Thermostats

20260623R1


Technical Catalogue

Set Temperature Adjustment

The desired room temperature can be adjusted directly using the ▲ and ▼ buttons. The selected setpoint value is displayed on the main screen and can be modified at any time during heating or cooling operation.

- **Increase Setpoint** – Press the ▲ button to increase the desired temperature
- **Decrease Setpoint** – Press the ▼ button to decrease the desired temperature.
- **Setpoint Display** – The configured temperature value is continuously shown on the main screen




Temperature adjustment is available during heating and cooling operation modes.

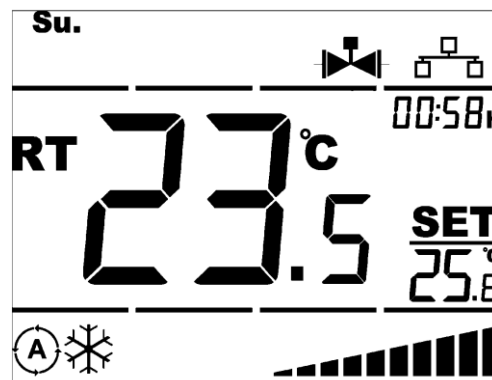

Weekly Program

The **Havkon SCT.2350.T.M Series** includes a weekly scheduling function for automatic temperature control during selected time periods.

Users can define individual start and stop times for each day of the week, allowing the controller to operate according to the programmed schedule.

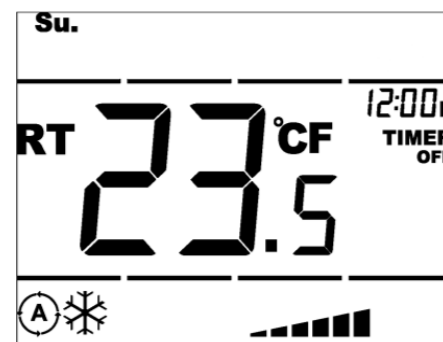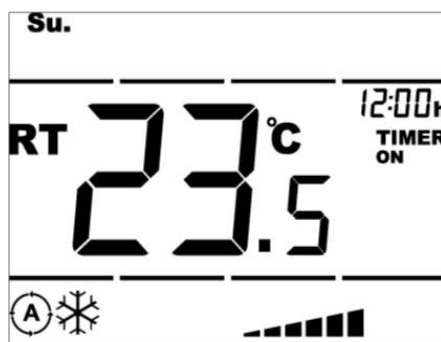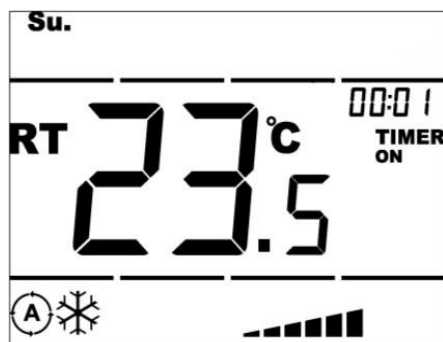

The weekly program menu allows:

- Daily start and stop time adjustment
- Individual weekday programming
- Automatic scheduled operation
- Weekly timer activation and deactivation

When the weekly schedule is active, the clock icon appears on the main display screen.

Notes

- If the start time is later than the stop time, weekly scheduling is ignored and the device remains off for the selected day.
- If the start time and stop time are identical, weekly scheduling is disabled for the selected day.
- When a valid weekly schedule is active, the clock icon is displayed on the main screen during the programmed operating period.

SCT Series

Fan Coil Thermostats

20260623R1

Technical Catalogue


Date & Time Settings

The device includes an integrated date and time setting function for weekly scheduling and time-based HVAC operation.

Users can configure:

- Date information
- Time information
- Day of the week

All settings are adjusted using the front buttons through the setup menu. Correct date and time configuration is required for accurate weekly program operation.

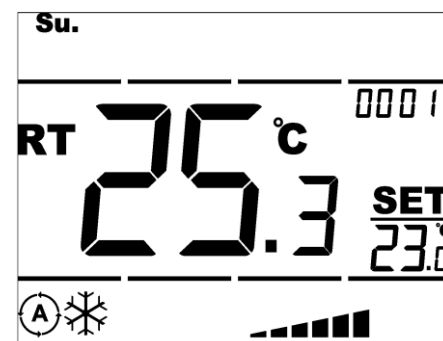

Display Backlight Settings


The display backlight timeout can be adjusted to suit different installation environments and user preferences. The setting is available through **Parameter 2** in the user menu and allows the backlight duration to be configured according to the desired operating conditions.

Users can configure:

- Display backlight timeout
- Backlight duration setting (1–10)
- Automatic return to normal display mode

The backlight timeout value can be adjusted between 1 and 10, where 1 represents the minimum duration and 10 represents the maximum duration.

The selected backlight setting helps optimize display visibility and user comfort during daily operation.

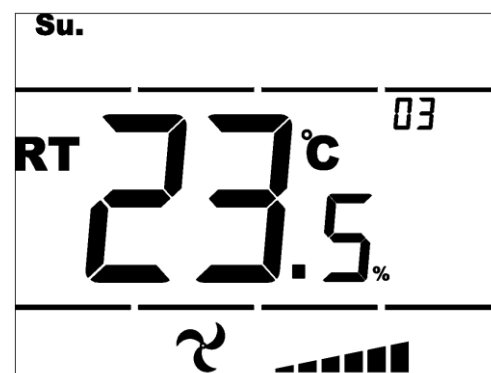

Key Lock Function

The key lock function prevents unauthorized or accidental changes to thermostat settings during normal operation. When enabled, user inputs are temporarily disabled while the device continues to operate normally.

To activate or deactivate the key lock function, press and hold the **Fan button** for **approximately 5 seconds**.

The lock status is indicated by the key lock icon displayed on the main screen.



SCT Series



Fan Coil Thermostats

20260623R1

Technical Catalogue

Service Settings Menu

The service settings menu provides access to advanced configuration parameters used for system commissioning, operation, and communication settings. Authorized personnel can modify device parameters to match specific application requirements.

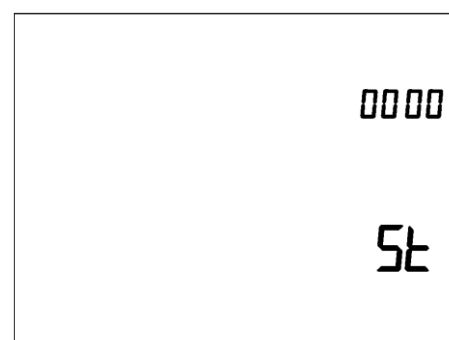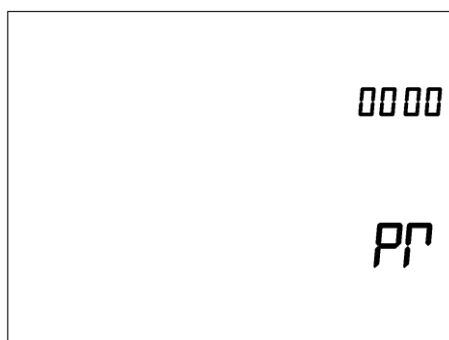

To access the service menu:

- Press and hold the ▲ and ▼ buttons simultaneously for approximately **2 seconds** while the device is in the standby mode
- Enter the service password and confirm using the **M (MODE/OK)** button
- Select the desired parameter and adjust its value as required
- Confirm the new setting using the **M (MODE/OK)** button

The service menu allows configuration of temperature control, fan control, system settings, communication parameters, and advanced control functions.

Notes

- **Default service password: 20**
- Parameter changes should only be performed by qualified technical personnel.



Warning

Incorrect parameter settings may affect thermostat operation and system performance.
Service menu access is intended for commissioning and maintenance purposes only.

SCT Series

Fan Coil Thermostats

20260623R1

Technical Catalogue

MODBUS-RTU Configuration

The **SCT.2350.T.M** models support **Modbus RTU communication** for integration with Building Management Systems (BMS) and HVAC automation networks.

Communication parameters can be configured through the service menu to match system requirements.

Users can configure:


- Modbus Device Address
- Communication Baud Rate
- Communication Parameters

Supported baud rate options:

- 1200 bps
- 2400 bps
- 4800 bps
- 9600 bps
- 19200 bps

Communication Specifications

- Protocol: Modbus RTU
- Interface: RS-485
- Slave Address Range: 1–247
- Register Type: Holding Registers
- Register Data Type: Signed 16-bit Integer (INT16)

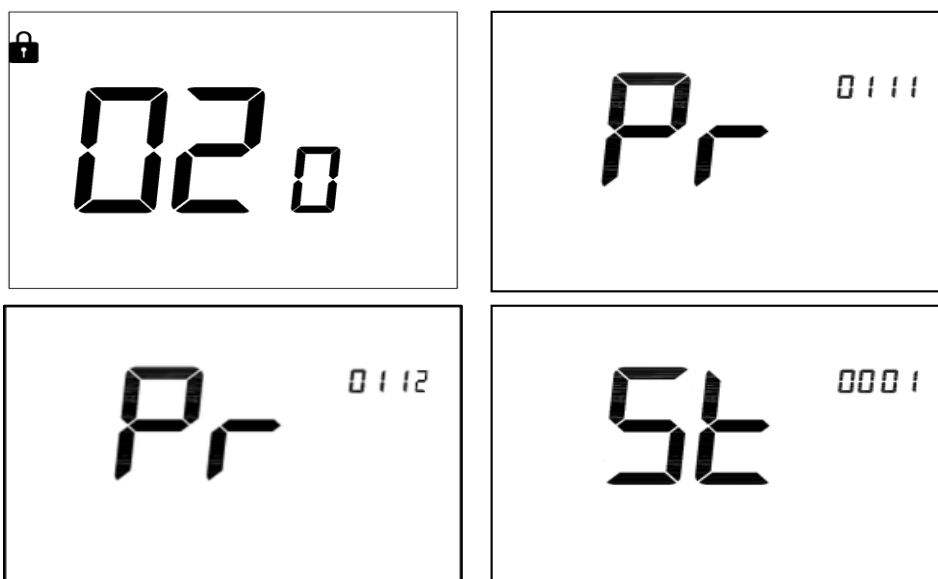

Temperature Registers:

Temperature values are represented with one decimal place.

Example:

280 = 28.0 °C

215 = 21.5 °C

-50 = -5.0 °C

Time Registers:

Time values are entered in HHMM format.

Example:

1210 = 12:10

0830 = 08:30

Notes

- Default service password: **20**
- Default Modbus Address: **Parameter 16**
- Default Baud Rate: **Parameter 17**
- Communication format is fixed as **8 Data Bits, No Parity, 1 Stop Bit**
- All Modbus register values are stored as signed 16-bit integers.



Warning

Parameter changes in the service menu should only be performed by authorized technical personnel. Incorrect communication settings may interrupt Modbus communication or device operation.

SCT Series

Fan Coil Thermostats

20260623R1

Technical Catalogue

Service Settings Menu

No	Parameter	Description	Factory Setting	Equivalent Value
0	Temperature Sensor Calibration	Adjusts the measured room temperature value to compensate for sensor deviations.	0	0.0°C
1	System Type Selection	Selects the HVAC application type. 0 → 2-Pipe Fan Coil, 1 → 4-Pipe Fan Coil,	1	4-Pipe Fan Coil
2	Minimum Setpoint Limit	Defines the minimum allowable cooling setpoint temperature. Example: 150 → 15.0°C.	150	15.0°C
3	Maximum Setpoint Limit	Defines the maximum allowable heating setpoint temperature. Example: 350 → 35.0°C.	350	35.0°C
4	Valve Control Deadband (ΔT)	Temperature differential between room temperature and setpoint for valve operation. Example: 9 → 0.9°C.	9	0.9°C
5	Automatic Cooling Deadband	Cooling deadband used during automatic mode. Example: 5 → 0.5°C.	5	0.5°C
6	Automatic Heating Deadband	Heating deadband used during automatic mode. Example: 5 → 0.5°C.	5	0.5°C
7	Fan Control Deadband (ΔT)	Temperature differential between room temperature and setpoint for fan operation. Example: 9 → 0.9°C.	9	0.9°C
8	Fan Speed Differential (ΔT)	Temperature differential between fan speed stages. Example: 10 → 1.0°C.	10	1.0°C
9	Fan Thermostatic Control	Selects fan operation when setpoint is reached. 0 → Fan and valve stop together, 1 → Valve stops and fan continues.	0	Fan & Valve Stop
10	Automatic Mode Fan Speed	Fan operating level in automatic mode. 0 → Stop, 1 → Speed 1, 2 → Speed 2, 3 → Speed 3.	0	Stop
11	Fan / Valve Delay Time	Delay time applied to fan and valve operation.	20	20 s
12	Temperature Source Selection	0 → Internal Sensor, 1 → External Sensor, 2 → Internal Sensor + Door/Window Contact.	0	Internal Sensor
13	Door / Window Contact Type	0 → Normally Open (NO), 1 → Normally Closed (NC).	0	NO
14	Door / Window Contact Delay	Delay time before door/window contact status is accepted.	20	20 s

SCT Series

Fan Coil Thermostats

20260623R1

Technical Catalogue

Service Settings Menu

No	Parameter	Description	Factory Setting	Equivalent Value
15	Temperature Filter Constant	Filter coefficient used to stabilize temperature readings.	5	Level 5
16	Modbus Device Address	Modbus RTU slave address.	1	Address 1
17	Modbus Baud Rate	Communication baud rate. 0→1200, 1→2400, 2→4800, 3→9600, 4→19200 bps.	3	9600 bps
18	Control Mode Selection	Defines the operating mode of the thermostat according to the application requirements. 0→Full Control 1→Heating Only 2→Cooling Only 3→Heating+Fan Mode 4→Cooling+Fan Mode 5→Fan Only Mode	0	Full Control
19	Radiator Mode	Enables valve-only operation without fan control.	0	Disabled
20	Valve Output NO/NC Selection	00 → Valve Output Normally Open (NO) 01 → Valve Output Normally Closed (NC)	00	Valve Output Normally Open (NO)
21	Power Recovery Mode	Defines device behavior after power restoration.	0	Resume Previous State

SCT Series

Fan Coil Thermostats


20260623R1

Technical Catalogue

Wiring Diagram


2-Pipe System – Thermostatic Fan Coil

Typical connection diagram for 2-pipe fan coil applications with a single heating/cooling valve output.

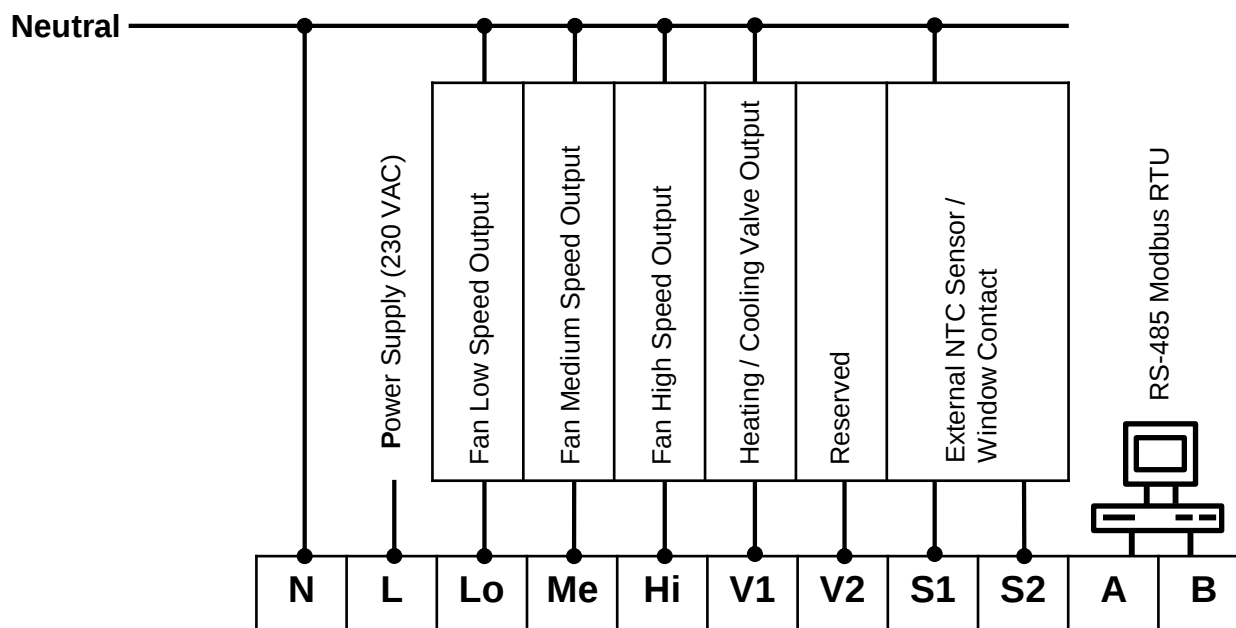

4-Pipe System – Thermostatic Fan Coil

Typical connection diagram for 4-pipe fan coil applications with independent heating and cooling valve control.

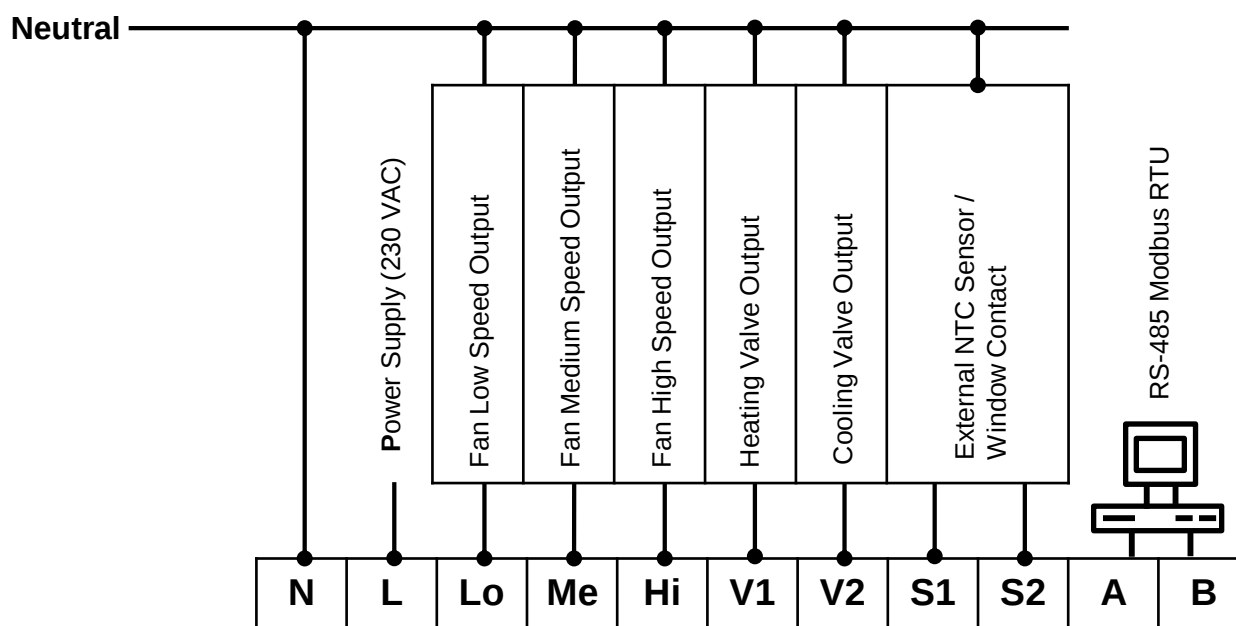

SCT Series

Fan Coil Thermostats

20260623R1


Technical Catalogue

Dimensions


The Havkon SCT.2350 Series is designed with a compact wall-mounted enclosure suitable for standard room thermostat applications.



Weight: 140 g.

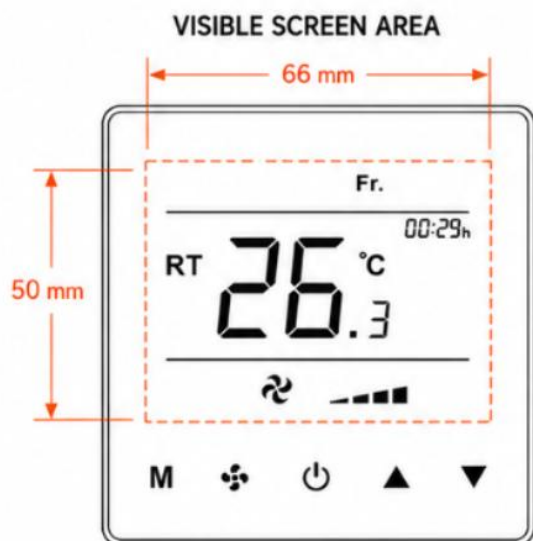

RECOMMENDED INSTALLATION HEIGHT

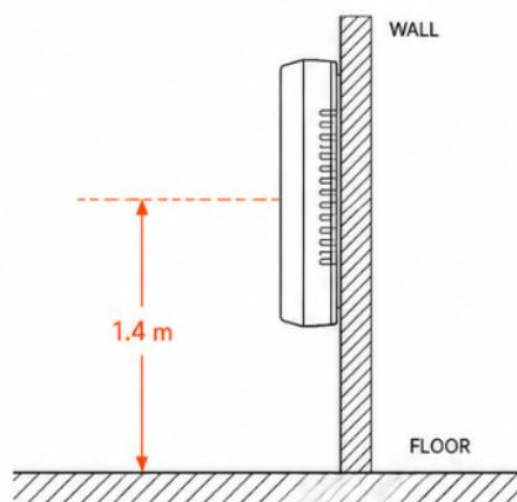

PARAMETER	VALUE
Width	86 mm
Height	86 mm
Depth	40 mm
Visible Screen Area	66 × 50 mm
Weight	140 g
Installation Height	1.4 m

i NOTE

All dimensions are given in millimeters.